

---



# *Mingo Custom Woods*

---

1965 W 4<sup>th</sup> Street  
Colby, KS 67701  
(785)462-2200

## **Instructions for using the Magnetic Lock with the Jewelry-Closet™ Cabinet**

To open cabinet door , simply position the magnetic key on cabinet door exterior, over the area where the lock is installed, and the lock will release its hold automatically. (There should be a slight drag on the magnetic key when you are over the locking mechanism.) Then simply push the door in allowing the touch latch to push the door open. When the key is removed, the lock snaps back into the locked position. If you do not want to lock the cabinet, simply push the spring loaded end in and flip the red unlocking bar over the top until it hits.

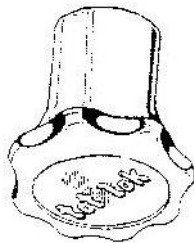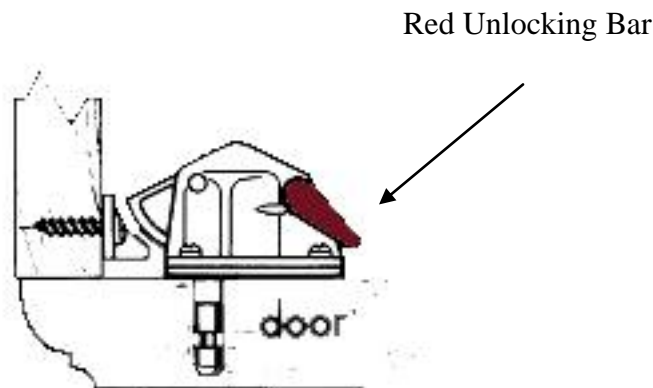

**Magnetic Key**